


Spare parts for dial indicator 2308 series

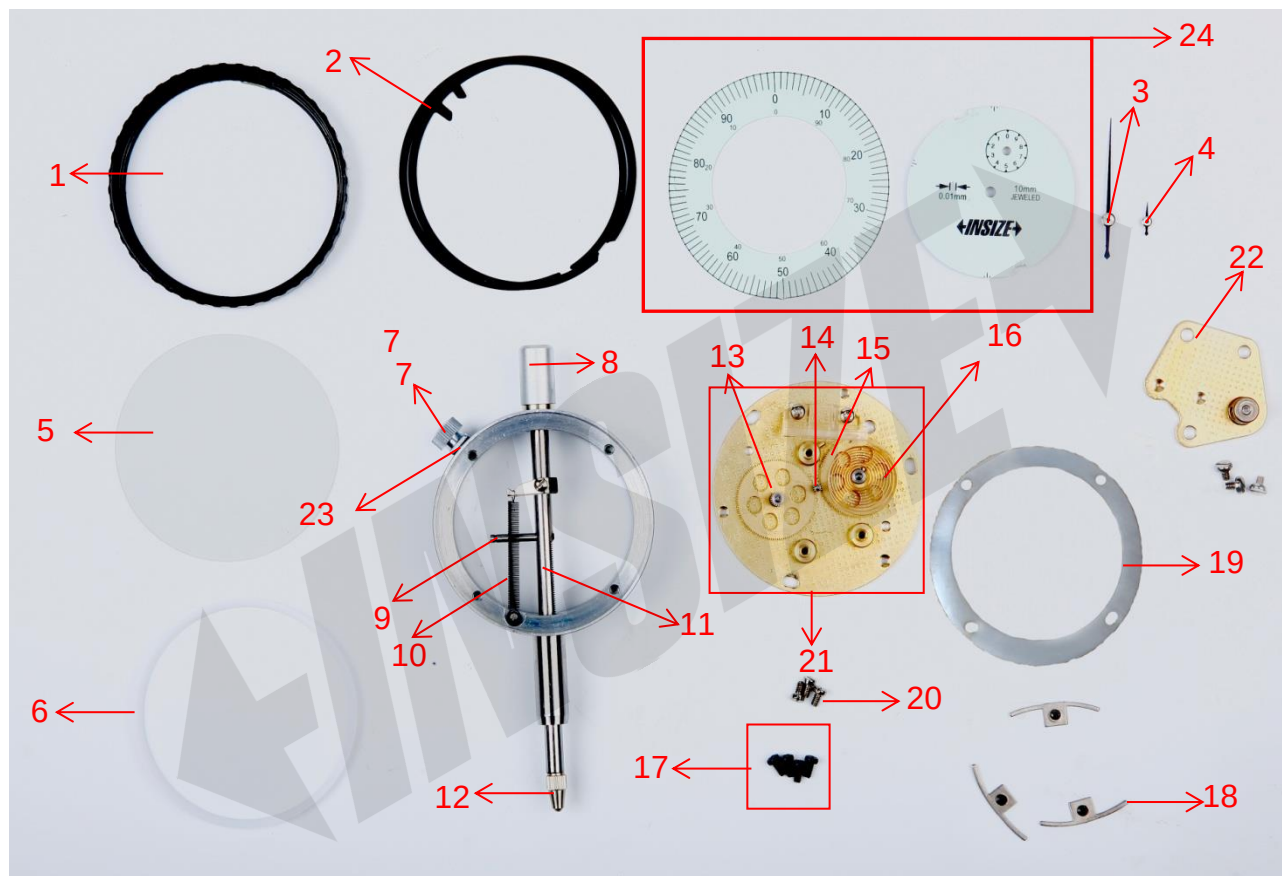

Part NO.	Code	Description
1	SP-BEZEL-2308T	Bezel
2	SP-MARK-1	Tolerance mark
3	SP-NEEDLES-1	Big needle
4	SP-NEEDLES-2	Small needle
5	SP-DIAL-GLASS-2308	Glass
6	SP-WASHER-2308T	Washer
7	SP-LOCK-SCREW-2308	Lock screw
8	SP-CAP-2308	Anti-dust cap
9	SP-GUIDE-PIN-2308T	Guide pin
10	SP-SPRING-2308	Spring
11	SP-SPINDLE-2308T	Spindle
12	SP-POINT-WL-1	Contact point
13	SP-MAIN-GEAR-2308T	Main gear
14	SP-CENTRAL-GEAR-2308T	Central gear
15	SP-GEAR-2-2308T	Assistant gear
16	SP-SPIRAL-SPRING-2308T	Spiral spring
17	SP-BACK-SCREW-2308	Screw for back
18	SP-SNAP-SPRING-2308T	Snap spring (supply in sigle)
19	SP-RUBBER-RING-2308	Rubber ring for 2308 and 2114
20	SP-SNAP-SCREW-2308T	Snap spring screw for 2308 series
21	SP-MECHANISM-2308-10	Mechanism for 2308-10(include the plate NO.22)
22	SP-PLATE-2308-10	Plate for 2308-10
23	SP-BEZEL-PLT-2308A	Bezel plt for 2308 series
24	SP-BP-2308-10	Dial plate for indicator 2308-10