


Spare parts for bore gage 2322/2122 series

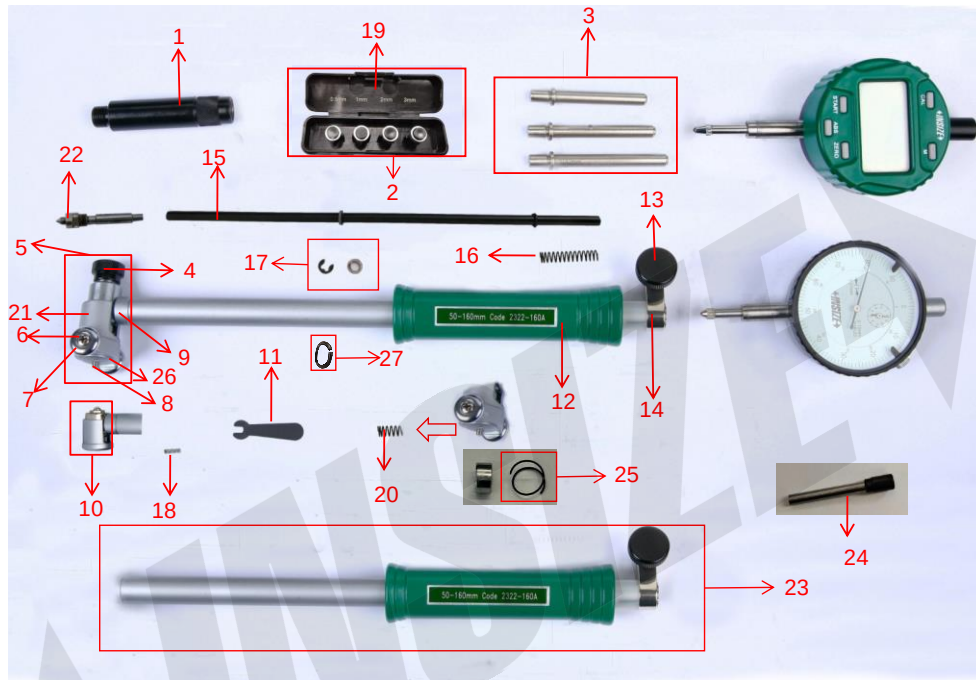

Part NO.	Code	Description
1	SP-EXTENSION-ROD-50	Extension rod for 2322-250A/-450A and 2122-250A/-450A
	SP-EXTENSION-ROD-55	Extension rod for 2322-160A/-161A and 2122-160A/-161A
	SP-EXTENSION-ROD-100	Extension rod for 2322-450A and 2122-450A
2	SP-BORE-GASKET-0.5-1	Gasket for 2322-35A and 2122-35A
	SP-BORE-GASKET-0.5-1-2-3	Gasket for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-BORE-GASKET-0.5-1-2-3-6	Gasket for 2322-250A/-450A and 2122-250A/-450A
3	7350-35	Interchangeable anvil for 2322-35A and 2122-35A (set)
	7350-60	Interchangeable anvil for 2322-60A and 2122-60A (set)
	7350-100	Interchangeable anvil for 2322-100A and 2122-100A (set)
	7350-160	Interchangeable anvil for 2322-160A and 2122-160A (set)
	7350-161	Interchangeable anvil for 2322-161A and 2122-161A (set)
	7350-250	Interchangeable anvil for 2322-250A and 2122-250A (set)
	7350-450	Interchangeable anvil for 2322-450A and 2122-450A (set)
	SP-7350-18-12	12mm Interchangeable anvil for 2852-18
	SP-7350-18-14	14mm Interchangeable anvil for 2852-18
	SP-7350-35-18	18mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-20	20mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-22	22mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-24	24mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-26	26mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-28	28mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-30	30mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-32	32mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-35-34	34mm Interchangeable anvil for 2322-35A and 2122-35A
	SP-7350-60-35	35mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-60-40	40mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-60-45	45mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-60-50	50mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-60-55	55mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-160-50	50mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-55	55mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-60	60mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-65	65mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-70	70mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-75	75mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-80	80mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-85	85mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-90	90mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-95	95mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-105	105mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-250-160	160mm Interchangeable anvil for 2322-250A and 2122-250A
	SP-7350-250-170	170mm Interchangeable anvil for 2322-250A and 2122-250A
	SP-7350-250-180	180mm Interchangeable anvil for 2322-250A and 2122-250A
	SP-7350-250-200	200mm Interchangeable anvil for 2322-250A and 2122-250A
	SP-7350-450-270	270mm Interchangeable anvil for 2322-450A and 2122-450A

4	SP-SCREW-NUT-2322-1	Nut for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-SCREW-NUT-2322-2	Nut for 2322-250A/-450A and 2122-250A/-450A
5	SP-HEAD-C-35	Measuring head for 2322-35A and 2122-35A (not include NO.3\4\9)
	SP-HEAD-D-60	Measuring head for 2322-60A and 2122-60A (not include NO.3\4\9)
	SP-HEAD-D-100-160	Measuring head for 2322-100A/-160A and 2122-100A/-160A (not include NO.3\4\9)
	SP-HEAD-D-250	Measuring head for 2322-250A and 2122-250A (not include NO.3\4\9)
	SP-HEAD-D-450	Measuring head for 2322-450A and 2122-450A (not include NO.3\4\9)
6	SP-GUIDE-SCREW-13S	Guide screw for 2322-60A and 2122-60A (in pairs)
	SP-GUIDE-SCREW-13	Guide screw for 2322-100A/-160A/-161A and 2122-100A/-160A/-161A (in pairs)
	SP-GUIDE-SCREW-15	Guide screw for 2322-250A/-450A and 2122-250A/-450A (in pairs)
7	SP-GUIDE-WHEEL-13	Guide wheel for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A(Ø13mm, in pairs)
	SP-GUIDE-WHEEL-15	Guide wheel for 2322-250A/-450A and 2122-250A/-450A (Ø15mm, in pairs)
8	SP-MOVING-TIP-2322-35	Moving tips, steel, for 2322-35A and 2122-35A
	SP-MOVING-TIP-2322-60	Moving tips, ceramic, for 2322-60A and 2122-60A
	SP-MOVING-TIP-2322-100	Moving tips, ceramic, for 2322-100A and 2122-100A
	SP-MOVING-TIP-2322-160	Moving tips, ceramic, for 2322-160A/-161A and 2122-160A/-161A
	SP-MOVING-TIP-2322-250	Moving tips, ceramic, for 2322-250A and 2122-250A
	SP-MOVING-TIP-2322-450	Moving tips, ceramic, for 2322-450A and 2122-450A
9	SP-SLEEVE-RING-C-35	Sleeve ring for 2322-35A and 2122-35A
	SP-SLEEVE-RING-D-60	Sleeve ring for 2322-60A and 2122-60A
	SP-SLEEVE-RING-D-100-160	Sleeve ring for 2322-100A/-160A and 2122-100A/-160A
	SP-SLEEVE-RING-D-250	Sleeve ring for 2322-250A and 2122-250A
	SP-SLEEVE-RING-D-450	Sleeve ring for 2322-450A and 2122-450A
10	SP-HEAD-C-35	Measuring head for 2322-35A and 2122-35A (not include NO.3)
11	SP-BORE-WRENCH-C	Wrench for 2322-35A and 2122-35A
12	SP-SB-DBG-1	Handle for 2322-35A and 2122-35A
	SP-SB-DBG-2	Handle 2322-60A/-100A/-160A/-161A and 2322-60A/-100A/-160A/-161A
	SP-SB-DBG-3	Handle 2322-250A/-450A and 2122-250A/-450A
13	SP-BORE-SCREW	Locking screw
14	SP-HOLDER	Holder
15	SP-DRIVE-ROD-160	Drive rod for 2322-160A and 2122-160A
	SP-DRIVE-ROD-35	Drive rod for 2322-35A and 2122-35A
16	SP-ROD-SPRING-160	Rod spring for 2322-160A and 2122-160A
	SP-ROD-SPRING-250	Rod spring for 2322-250A and 2122-250A
	SP-ROD-SPRING-35	Rod spring for 2322-35A and 2122-35A
17	SP-CIRCLIP-2322-35	Rod circlip for 2322-35A and 2122-160A
	SP-CIRCLIP-2322-160	Rod circlip for 2322-160A and 2122-160A
18	SP-TIP-SPRING-2322-250	Moving tips spring for 2322-250A and 2122-250A
	SP-TIP-SPRING-2322-450	Moving tips spring for 2322-450A and 2122-450A
19	SP-PLT-HZ	Box for gasket
20	SP-HEAD-SPRING-160	Moving tips spring for 2322-160A and 2122-160A
	SP-HEAD-SPRING-35	Moving tips spring for 2322-35A and 2122-35A
21	SP-GUIDE-2322-160	Guid for 2322-160A and 2122-160A
	SP-GUIDE-2322-250	Guid for 2322-250A and 2122-250A
22	SP-HEAD-ROD-2322-250	Head rod for 2322-250A and 2122-250A
23	SP-HANDLE-2322-35	Handle for 18-35mm bore gage
	SP-HANDLE-2322-60	Handle for 35-60mm bore gage
	SP-HANDLE-2322-160	Handle for 35-160mm bore gage
	SP-HANDLE-2322-450	Handle for 160-450mm bore gage
24	SP-MANDRIL-2322-18	Mandril for 2853-18
25	SP-GUIDE-SPRING-35	Guide spring for 2322-35
26	SP-LOCK-SCREW-2322-160	Lock screw for 2322-160A
27	SP-CIRCLE-160	Rod circle for 2322-160A and 2122-160A