

Spare parts for dial test indicator 2380-08



Part NO.	Code	Description
1	SP-DIAL-BEZEL-2380-08	Bezel (include the glass)
2	SP-DIAL-POINTER-2380W	Pointer
3	SP-BP-2380-08	Dial
4	SP-SPIRAL-SPRING-2380-08	Balance spring
5	6298-2	Holding stem (8mm)
6	6298-1	Holding stem (4mm)
7	SP-LINK-GEAR-2380-08	Link gear
	SP-LINK-GEAR-2380-02	Link gear for 2380-02 and 2381-02
8	SP-DIAL-ASSY-2380-08	Assy for 2380-08
9	SP-BEARING-ASSY-2380	Bearing assy
10	SP-DIAL-WRENCH-WL	Wrench
11	6284-3	Contact point
12	SP-CENTRAL-GEAR-2380-08	Central gear for 2380-08
13	SP-TRANSFER-2380-08	Transfer for 2380-08
14	SP-COPPER-PLATE-2380-08	Copper plate for 2380-08
	SP-COPPER-PLATE-2380-02	Copper plate for 2380-02