

Spare parts for dial test indicator 2381-08



Part NO.	Code	Description
1	SP-DIAL-BEZEL-2381-08	Bezel
2	SP-DIAL-POINTER-2381W	Pointer
3	SP-BP-2381-08	Dial
4	SP-SPIRAL-SPRING-2380-08	Balance spring
5	6298-2	Holding stem (8mm)
6	6298-1	Holding stem (4mm)
7	SP-LINK-GEAR-2380-08	Link gear
8	SP-DIAL-ASSY-2380-08	Assy for 2381-08
9	SP-BEARING-ASSY-2380	Bearing assy
10	SP-DIAL-WRENCH-WL	Wrench
11	6284-3	Contact point