

Spare parts for dial test indicator 2383-08A



Part NO.	Code	Description
1	6284-82	Contact point
2	6298-2	Holding stem(8mm)
3	6298-1	Holding stem(4mm)
4	SP-DIAL-WRENCH-WL	Wrench
5	SP-CENTRAL-GEAR-2383-08	Central gear for 2383-08A
6	SP-DIAL-ASSY-2383-08	Assy for 2383-08
7	SP-SPIRAL-SPRING-2383-08	Balance spring(include part no.5)
8	SP-LINK-GEAR-2383-08	Link gear