


Spare parts for dial test indicator 2386-16A

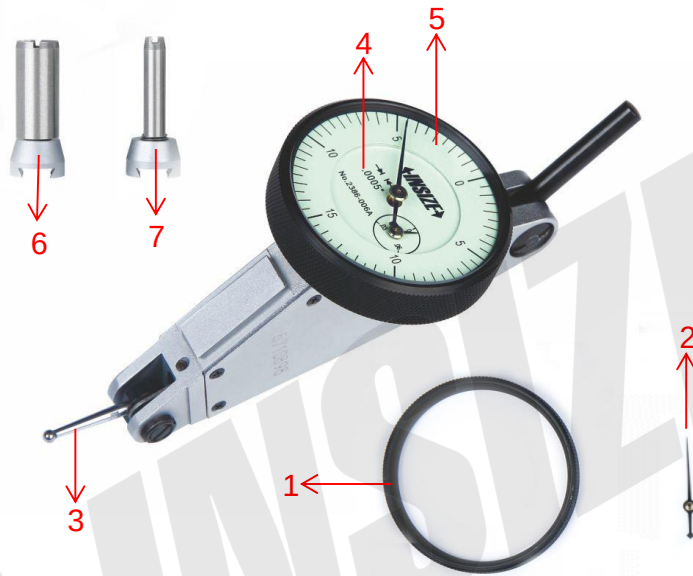

Part NO.	Code	Description
1	SP-DIAL-BEZEL-2386-006A	Bezel (include the glass)
2	SP-DIAL-POINTER-2381W	Pointer
3	6284-62	Contact point
4	BPN-2386-16A	Dial
5	BPW-2386-16A	Dial
6	6298-2	Holding stem(8mm)
7	6298-1	Holding stem(4mm)