

# DSW-B024


## WATERPROOF DIGITAL STOPWATCH OPERATION MANUAL

### PART I Features

- Single row display with backlight
- Measure up to 24 hours, 0.01 second resolution within 30 minutes
- Time and calendar display with hour, minute, second, month, date and day
- 2 recallable memory
- Hourly chime and alarm
- 12/24 hours time for mat
- Waterproof level: 3 bar (about 30 meters)

### PART II Button Instructions


- 【A】 — START/STOP
- 【B】 — RESET
- 【C】 — MODE
- 【D】 — EL

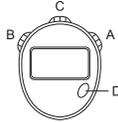

### PART III Operating Instructions

#### 3.1 Mode switching

In clock mode, press “C” key to switch between modes as the following sequence:

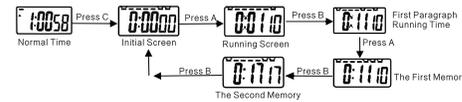

#### 3.2 Alarm setting

In normal time mode, press “C” two times to enter the alarm setting and then “hour” starts to flash. Press “B” to switch between “hour” and “minute”. Press “A” key each time to add “1”. Keep pressing to add rapidly. After setting the alarm, press “C” to exit the alarm setting and back to clock mode.

#### 3.3 Time setting

In normal time mode, press “C” three times to enter the time setting and then “second” starts to flash. Press “B” to switch between as the following sequence: “second” - “minute” - “hour” - “minute” - “day” - “month” - “week”.

Press “A” key each time to add “1”. Keep pressing to add rapidly. While setting “hour”, system switch 12/24 hour automatically. After setting the alarm, press “C” to exit the alarm setting and back to clock mode.

- Common year is preset in calendar (28 days in February).

#### 3.4 Function detail

In normal time mode:

- Press and hold “A” button to display “date and week”
- Press and hold “B” button to display “alarm time”
- Press and hold “A” and “B” at the same time to switch on or switch off the “alarm function”.
- Press and hold “B” and “C” at the same time to switch on or switch off the “hourly chime function”.
- When the alarm is active, press “A” to enter repeat alarm mode, the alarm will repeat after five minutes if you need, press “B” to cancel.

#### 3.5 EL backlight function

Press “D” key to turn on the backlight and after three seconds the backlight will be turned off automatically.

### PART IV Maintenance

- When the battery is low, please replace the battery with a LR44 (alkaline) or CR2032 (lithium) or equivalent battery.
- The lens shall be replaced if it damaged, as contamination from dust, moisture, and other substances will damage the module.
- Please don't press the button underwater to prevent damage from water.
- Battery and physical damage is not covered by warranty.

PLEASE SCAN QR CODE TO  
WATCH OPERATION VIDEO  
OF THE PRODUCTS.



MN-DSW-B024-E V0