

Hand Lubrication Pump



- **Rattling hand pump LT model**

Rattle the lever of the pump reiteratively and the oil will be pressured into the main pipe. When the lever is released, it will return to the original position automatically.

| ORDER NO. | Discharged amount (c.c/st) | Max. discharged pressure (kg/cm ²) | capacity (c.c) | Efficient capacity (c.c) | WEIGHT (kg) | CODE NO. |
|-----------|----------------------------|--|----------------|--------------------------|-------------|----------|
| LT-4 | 4 | 15 | 230 | 200 | 0.7 | 1026-050 |