

PCE Americas Inc. 711 Commerce Way Suite 8 Jupiter FL-33458 USA From outside US: +1 Tel: (561) 320-9162 Fax: (561) 320-9176 info@pce-americas.com PCE Instruments UK Ltd. Units 12/13 Southpoint Business Park Ensign way Hampshire / Southampton United Kingdom, SO31 4RF From outside UK: +44 Tel: (0) 2380 98703 0 Fax: (0) 2380 98703 0 info@pce-instruments.com

www.pce-instruments.com/english www.pce-instruments.com

Test Stand for Force Gauge PCE-MTS500 INSTRUCTION MANUAL



CONTENTS

1.Function
2.Structure
3.Installation
4.Specification
5. Attention
6.Operation
7. Maintenance
8. Packing List


1. Function


REG/O VU722 Electric Vertical Test Stand, applied in tension and compression test, is assembled with (2N-5kN) Series Force Gauge. The stand adopts double-column construction

with good stability, wide application range and easy operation. Furthermore, it has advantages of non-polar speed adjustment, manual or automatic operation, suitable for fields of rubber & plastic products, textile, construction, complex material, wire & cables, auto accessories, engine and scientific research, etc.

Note: When installing different force gauge, it should equip different backboard.

2.Structure

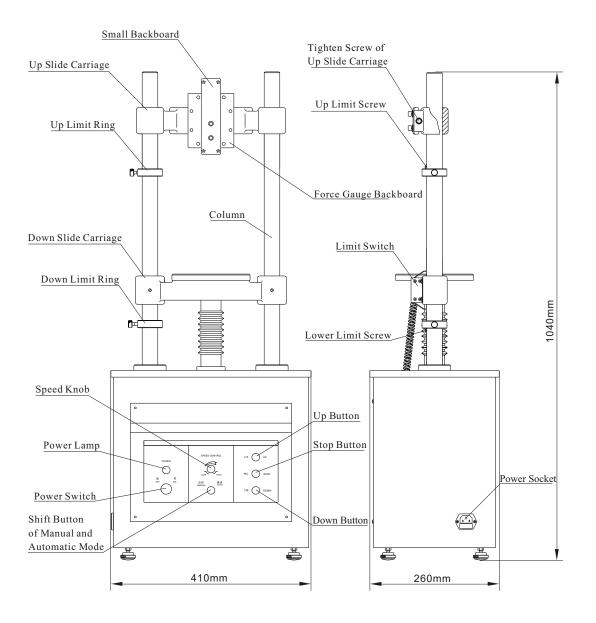

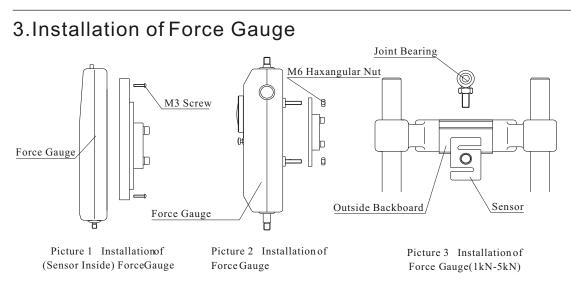

- 1. When installing (Sensor Inside) Force Gauge, take out 4 pieces of M3 screws from toolbox, and through 4 deep hole of Small Backboard, tighten them into 4 installing hole on force gauge(Picture 1);
- 2. When installing Force Gauge, take off 4 pieces of M6 hexangular screws of back cover, and backboard. also take off Small Backboard on test stand;through 4 hole of Force Gauge backboard, tighten 4 pieces of M6 screws into insalling hole of Force Gauge by nut (Picture 2);
- 3. When installing (1kN-5kN) Force Gauge, it should equip the SJ-021 Outside Backboard. Loosen the 4 pieces of M6 hexangular screws, take off the SKN Backboard, fix the SJ-021 Backboard on the position of Force Gauge Backboard by the 4 screws; Take one of the joint axletree from sensor toolbox, and tighten the sensor through hole of backboard as showing in picture (Picture 3).

4. Specification

Capacity		(
Measuring Stroke			
Measuring Speed			
Maximum Gap			
Work Voltage			
Rate Current			
Fuse of MainCircuit			
Fuse of Controlling Circuit			
WorkingTemperature	\pm	°C	
Store & Delivery Temperature	°C		°C
Relative Humidity			

5.Attention

- A. Please do not take Up or Lower Limit Screw at any time to prevent screw mandrel from getting out or damaging to other accessories.
- B. When needing to move UP Slide Carriage for appropriate space, please pay attention:
 - 1. Loosen the tighten screw at two side of Up Slide Carriage, during which it should support the slide carriage by hands to avoid dropping down.
 - 2. The Up Slide Carriage will not upper than the top of column, and lower than Up Limit Screw.

c. Operation

Examine Before Operation

- A. Check Tighten Screw of Up Slide Carriage to be locked firmly;
- B. Turn on the power switch, then the power lamp will be light.
- C. Examine the stand whether there is abnormal sound when moving without load.

Manual Test

Choose the Manual mode by pressing Shift Button of Manual and Automatic Mode; Press Up or Down button all along, the test stand will work; Loosen the button, the test stand will stop work and finish test.

Automatic Test

Choose the Automatic mode by pressing Shift Button of Manual and Automatic Mode; Press Up or Downbutton once, the test stand will work; Press Stop button, the test stand will stop and finish test.

7.Maintenance

- A. Please keep the environment clean and prevent liquid and metal scraps from entering the engine box, otherwise electric shock may happen and driving components may be damaged.
- B. Please keep the column and lower slide carriage hole clean.
- C. Add some lubricant to screw mandrel and gear afterperiod of time.
- D. Please pullout power connector, and make the stand away from dust and moisture if it is not used.

8.Packing List

Number	Parts Name	Quantity
1	REG/O VU722 Main Body	1
2	M10 Inner Hexagon Spanner	1
3		1
4	110/220V Power Wire	1
5	Manual	1
6	Qualification Certificate	1