



User Manual

PCE-GMM 10 Grain Moisture Meter



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 19 January 2021
v1.1



Contents

1	Safety notes	1
2	Specifications	2
3	Meter Overview.....	2
4	Operation Instructions	3
5	Moisture Value Correction	3
6	Maintenance	3
7	Warranty.....	4
8	Disposal	4

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.

2 Specifications

Cereal	Measuring range	Resolution	Accuracy
Wheat	9 ... 38%	0.1%	± 0.5%
Corn	9 ... 39%	0.1%	± 0.5%
Japonica rice	8.5 ... 40%	0.1%	± 0.5%
Indian rice	8.9 ... 30.4%	0.1%	± 0.5%
Soybeans	8.9 ... 33.4%	0.1%	± 0.5%
Rice	10.4 ... 26.4%	0.1%	± 0.5%
Sorghum	8 ... 35%	0.1%	± 0.5%
Rapeseed	6.4 ... 25.4%	0.1%	± 0.5%
Millet	9.4 ... 28.4%	0.1%	± 0.5%
Peanuts	5.4 ... 18.9%	0.1%	± 0.5%
Barley	9.4 ... 26.4%	0.1%	± 0.5%
Sunflower seeds	7.9 ... 24.4%	0.1%	± 0.5%
Coffee beans	10 ... 30%	0.1%	± 0.5%
Cocoa beans	4.5 ... 17%	0.1%	± 0.5%
Sesame	6 ... 18%	0.1%	± 0.5%
Flaxseed	4.5 ... 18.0%	0.1%	± 0.5%
Almonds	4.5 ... 21.0 %	0.1%	± 0.5%
Repeatability	0.2%		
Adjustment range	± 9.9%		
Sample size	About 65 ml		
Operating temperature range	0 ... 40°C / 32 ... 104°F		
Temperature compensation	Automatically		
Power supply	9V block battery		
Automatic shutdown	After 3 minutes		

3 Meter Overview



- 1 Cover
- 2 Measuring Cup
- 3 Display

4 Operation Buttons

4 Operation Instructions

1. Press the **power** button to turn the meter on.
2. Press the **set** button; the meter will now display "Select kind" and "Adjust moisture".
3. Press **set** again to select "Select kind"
4. Use the **+** and **-** buttons to navigate the menu
5. Press **set** to select the desired grain type; the meter will now return to measurement mode.

Important!

6. Fill the measuring cup $\frac{1}{2}$ full with grain. Gently shake the meter to settle the grains. Full the measuring cup to the top.
7. Gently press the cover down during measurement to ensure accurate results. If the grains settle further after pressing the cover down, refill again to the top and measure again.
8. Remove the cover and replace the sample grains with a new sample.
9. Pressing the **set** button after 2 or more measurement will display the average value of the measurement results.

Using the **+** and **-** buttons in measurement mode will adjust the display brightness.

The meter will display "LOW" if the battery runs low.

5 Moisture Value Correction

Depending on the environment, a grain may have varied moisture. This can be adjusted for each grain type individually.

1. Press the **set** button; the meter will now display "Select kind" and "Adjust moisture".
2. Press **set** again to select "Select kind"
3. Use the **+** or **-** button to navigate the menu
4. Press **set** to select the desired grain type; the meter will now return to measurement mode.
5. Press **set** again, but this time select "Adjust moisture"
6. Use the **+** and **-** buttons to adjust the moisture value.
7. Press and hold the **set** button to save the value and return to the measurement mode.

6 Maintenance

- Before use, please place the grains and the meter in the same location and under the same temperature to ensure measurement accuracy.
- Handle the meter with care.
- Ensure the battery is in good condition. Battery leakage can cause damage to the meter.
- Use the provided brush to gently clean the measuring cup after use.



7 Warranty

You can read our warranty terms in our General Business Terms which you can find here: <https://www.pce-instruments.com/english/terms>.

8 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.



PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 4
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

United Kingdom

PCE Instruments UK Ltd
Unit 11 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
711 Commerce Way suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forêts
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

China

PCE (Beijing) Technology Co., Limited
1519 Room, 6 Building
Zhong Ang Times Plaza
No. 9 Mentougou Road, Tou Gou District
102300 Beijing, China
Tel: +86 (10) 8893 9660
info@pce-instruments.cn
www.pce-instruments.cn

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

Hong Kong

PCE Instruments HK Ltd.
Unit J, 21/F., COS Centre
56 Tsun Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: +852-301-84912
jyi@pce-instruments.com
www.pce-instruments.cn