

## FLAT BACKS




7330-F2



7330-F8

Code	For digital/dial indicators
7330-F1	2311
7330-F2	2301
	2302
	2308
	2309 (except 2309-30, 2309-30F)
	2313
	2314
	2316
	2324
7330-F5	2801
	2103
	2104
	2108
	2109
	2112
	2115

Code	For digital/dial indicators
7330-F5	2116
	2117
	2118
	2138
	2139
2501	
7330-F6	2318
7330-F7	2830
	2882
	2885
	2888
	2889
	2891
7330-F8	2892
	2890
7330-F9	2887
7330-F10	2886
7330-F10	2310

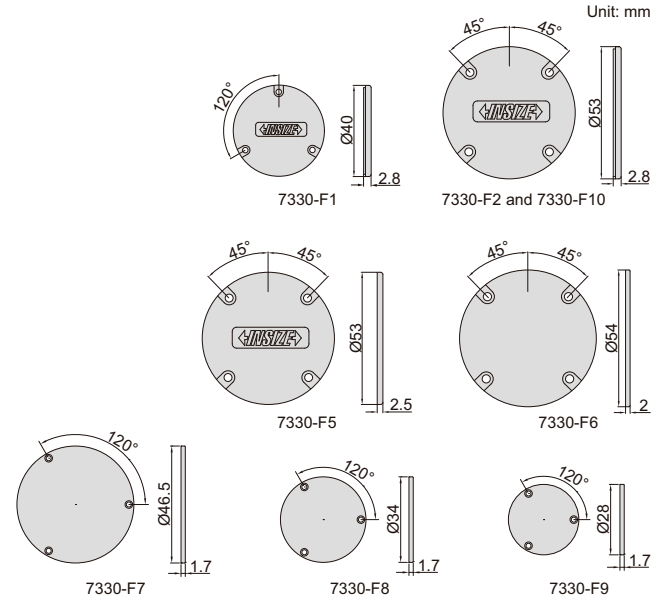

## LUG BACKS



7330-L2



7330-L8

Code	For digital/dial indicators
7330-L1	2311
7330-L2	2301
	2302
	2308
	2309 (except 2309-30, 2309-30F)
	2313
	2314
	2316
	2324
7330-L5	2801
	2103
	2104
	2108
	2109
	2112
	2115

Code	For digital/dial indicators
7330-L5	2116
	2117
	2118
	2138
	2139
2501	
7330-L6	2318
7330-L7	2830
	2882
	2885
	2888
	2889
	2891
7330-L8	2892
	2890
7330-L8	2887
7330-L10	2310

