



User Manual

Thermometer PCE-T312N



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 22 October 2019
v1.0



Contents

1	Safety notes	1
2	Delivery contents	2
3	Specifications	2
4	Display description	3
5	Key description	4
6	Settings	4
6.1	Change type of thermocouple	4
6.2	Set offset.....	5
6.3	Automatic Power Off	5
7	Thermocouples	5
8	Hold reading	5
9	MIN / MAX / AVG	6
10	Replacing the batteries	6
11	Warranty	7
12	Disposal	7

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.




2 Delivery contents

- 1 x Contact Thermometer PCE-T312N
- 2 x TF-500 Thermo-wire sensor
- 3 x 1.5V AAA batteries
- 1 x User manual

3 Specifications





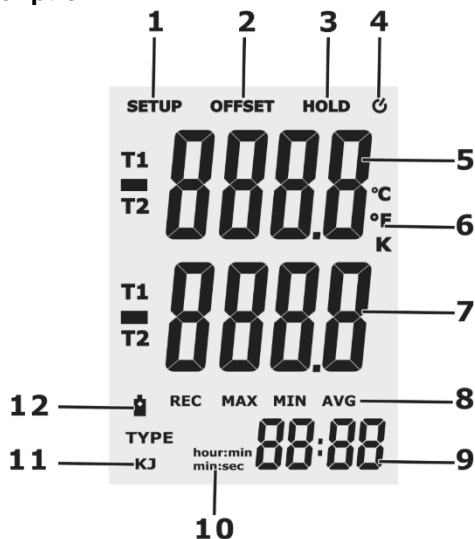


Thermocouple types	Type K and Type J
Measuring range thermocouple Type K	-200 ... 1372°C / -328 ... 2501°F
Measuring range thermocouple Type J	-210 ... 1100°C / -346 ... 2012°F
Measurement units	°C / °F / K
Display	Large, dual LCD with backlight
Display functions	T1, T2, T1-T2, MAX, MIN, AVG
Power supply	3 x 1.5V AAA batteries
Automatic shutdown	After 20 minutes of inactivity
Temperature accuracy over -100°C (148°F)	± [0.15% rh +1°C (1.8°F)]
Temperature accuracy under -100°C (148°F)	± [0.5% rh +2°C (3.6°F)]
Temperature accuracy T1-T2	± [0.5% rh +1°C (1.8°F)]
Operating temperature	0 ... 50°C (4 ... 122°F)
Storage temperature	10 ... 50°C (14 ... 122°F)

4 Display description






No.	Short description	Long description
1	"Setup" icon	Shows that you are in the menu
2	"Offset" icon	
3	"Hold" icon	Shows that the reading has been held
4	"Auto-Off" icon	Shows that the meter will turn off automatically
5	Primary display	Shows the reading of T1, T2 as well as the difference between T1 and T2
6	Units	Shows the unit (°C, °F, K)
7	Secondary display	Shows the following functions: MAX, MIN, AVG, Offset, T1 and T2
8	MAX, MIN, AVG display	Shows what function is shown in the secondary display
9	Measurement period	Shows the measurement period
10	Time units	Shows if hours and minutes or minutes and seconds are displayed in the field for the measurement period
11	Type of thermocouple	Shows the set type of thermocouple
12	Battery level indicator	Shows that the batteries are flat and must be replaced

5 Key description

Key	Description
	Turns the meter on/off
	When you are in the settings screen, you can open a menu item and confirm the set value with this key.
	Changes what is shown on the primary and secondary display. Options: T1, T2 and T1-T2
	Changes the unit. Options: °C, °F and K
	By pressing this key once in the measuring screen, the reading will be held. By pressing the key again, the measurement will be continued. In the settings, this key can be used to select a menu item and parameters within a menu can be changed.
	By pressing this key in measuring mode, you can select between MIN, MAX and AVG. In the settings, this key can be used to select a menu item and parameters within a menu can be changed.
	By pressing this key once, the backlight is activated. By pressing the key again, the backlight is deactivated. To enter the settings, press and hold this key for three seconds. To leave the settings, press and hold this key again for three seconds.

6 Settings

To enter the settings, press and hold the  key for three seconds. To leave the settings, press and hold the  key again for three seconds. To select a menu item or to change parameters within the menu items, use the arrow keys at the side of the meter. To confirm a change or to open a menu item, press the  key. The settings are arranged as follows:

Menu	Display	Possible settings
Set type of thermocouple	TYPE	K and J
Offset	OFFSET	Range ± 5.0 °C / ± 9.0 °F
Auto Off	SLP	ON and OFF

Note: As long as the MIN MAX AVG function is activated, you cannot enter the menu.

6.1 Change type of thermocouple

If the connected type of thermocouple is different from the type shown in the lower left-hand side of the display, the meter's thermocouple setting must be changed accordingly. To do so, enter settings mode and change the type as required. Thermocouples of the types K and J can be connected.

6.2 Set offset

When the accuracy is outside the specifications, an offset can be carried out. The possible range for the offset is $\pm 5.0\text{ }^{\circ}\text{C}$ / $\pm 9.0\text{ }^{\circ}\text{F}$. To be able to set the offset, first connect the meter to the thermocouples. Then place the thermocouples into a liquid of known temperature, for instance ice water. Now wait for the displayed reading to stabilise. Then go to the settings and change the offset until the displayed reading equals the value of the reference liquid. Offsets must be set for each channel individually.

6.3 Automatic Power Off


The meter has an automatic power off function. This means that the meter turns off automatically after 20 minutes of inactivity. To disable this function temporarily, enter the settings. In the menu item "SLP", you can disable this function.

ON = enabled, OFF = disabled

Note: Everytime the meter is powered on, this function will be enabled automatically.




7 Thermocouples

If you want to use thermocouples, connect these via the connectors at the upper side of the meter. Observe correct polarity. Now power on the meter. After approx. a second, a reading will be displayed. If no thermocouple is attached for a channel, "----" will be displayed. When the reading is exceeded, "OL" will be displayed.

With the  key, you can select T1, T2 or T1 – T2 to be shown in the primary or secondary display.

Note: Ensure that you have set the correct type of thermocouple. The type of thermocouple can be changed in the settings. The current thermocouple is shown in the lower left-hand part of the display.


8 Hold reading


To hold the currently displayed reading, press the  key during the measurement. "HOLD" will be displayed. While "HOLD" is displayed, the  key will be active. To continue the measurement, press the  key again.

9 MIN / MAX / AVG

The temperature meter has the following measuring functions:

Name	Description
MIN	Shows the lowest reading
MAX	Shows the highest reading
AVG	Shows the average value

To activate one of these functions, press the  key. "REC" will appear in the display along with the function you set. The current reading will only be shown in the primary display now. In the secondary display, the respective value of the measuring function will be displayed. At the same time, the measurement period will start, which will show you when the value has been determined. You can switch between the different measuring functions at any time. All values are determined

continuously. To leave this function, press and hold the  key for three seconds.

Note: After leaving this measuring function or when the meter is turned off, the saved readings will be lost.

10 Replacing the batteries

As soon as the battery icon appears in the display, the batteries must be replaced to make sure the meter works in line with its specifications. To replace the batteries, first turn off the meter. Then open the battery compartment at the rear side. Replace the batteries by three new 1.5 V AAA batteries, observing correct polarity. The meter is ready to be used again after closing the battery compartment.

11 Warranty

You can read our warranty terms in our General Business Terms which you can find here: <https://www.pce-instruments.com/english/terms>.

12 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.





PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 4
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

Germany

PCE Produktions- und
Entwicklungsgesellschaft mbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 471
Fax: +49 (0) 2903 976 99 9971
info@pce-instruments.com
www.pce-instruments.com/deutsch

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
711 Commerce Way suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forêts
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

United Kingdom

PCE Instruments UK Ltd
Unit 11 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

China

PCE (Beijing) Technology Co., Limited
1519 Room, 6 Building
Zhong Ang Times Plaza
No. 9 Mentougou Road, Tou Gou District
102300 Beijing, China
Tel: +86 (10) 8893 9660
info@pce-instruments.cn
www.pce-instruments.cn

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce- cihazlari.com.tr
www.pce-instruments.com/turkish

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

Hong Kong

PCE Instruments HK Ltd.
Unit J, 21/F., COS Centre
56 Tsun Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: +852-301-84912
jyi@pce-instruments.com
www.pce-instruments.cn